

Maintenance Instructions

FAVORIT Si-line - Security System Timber

Druckstand: 0403/SF/??


Lubricate all eccentric locking cams and strikers with oil.
Use **only** clean and non-resinous grease or oil.

-  = lubricate here
-  = adjustable eccentric locking cams
-  = adjustable locking cams S-ES
-  = important areas for safety

19744_3_04.04/1

GB

FAVORIT Si-line Security System Timber Arched-Head Window

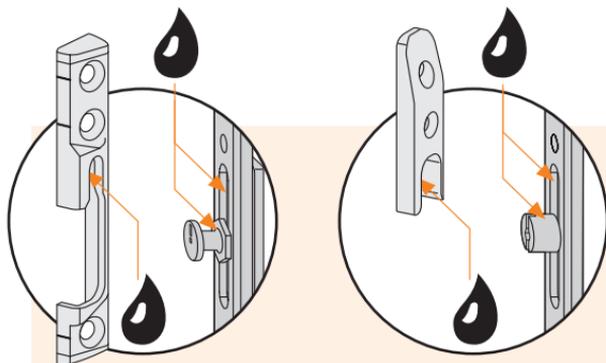

Lubricate all eccentric locking
cams and strikers with oil.

Use **only** clean and
non-resinous grease or oil.



= lubricate here



= adjustable
eccentric locking cams




= adjustable locking cams S-ES



= important areas for safety

FAVORIT Si-line Security System Timber Angle-Head Window

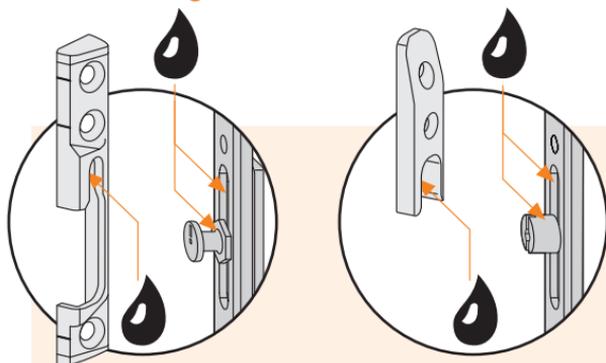

Lubricate all eccentric locking cams and strikers with oil.

Use **only** clean and non-resinous grease or oil.



= lubricate here



= adjustable eccentric locking cams




= adjustable locking cams S-ES




= important areas for safety

Hanging a Tilt and Turn Window*

1. Hanging sash onto bottom hinge

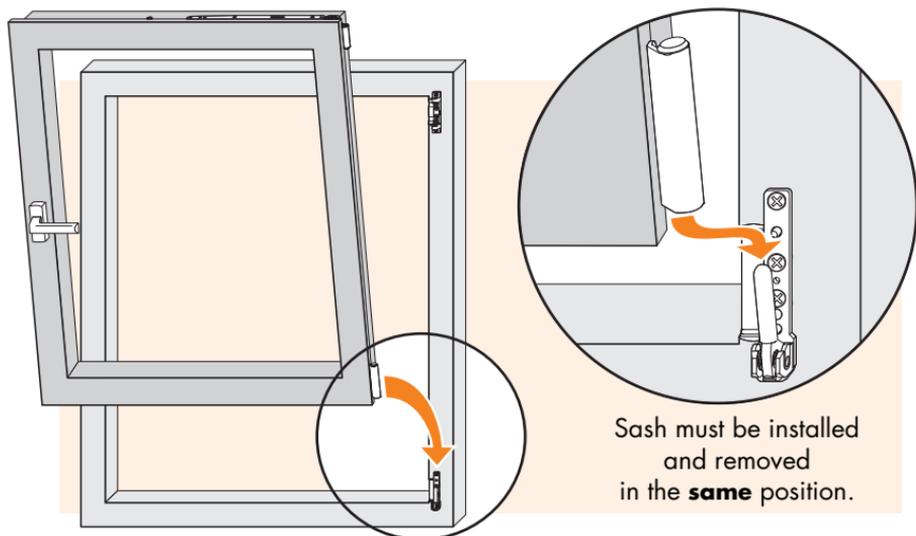


2. Connection to top hinge with built-in friction

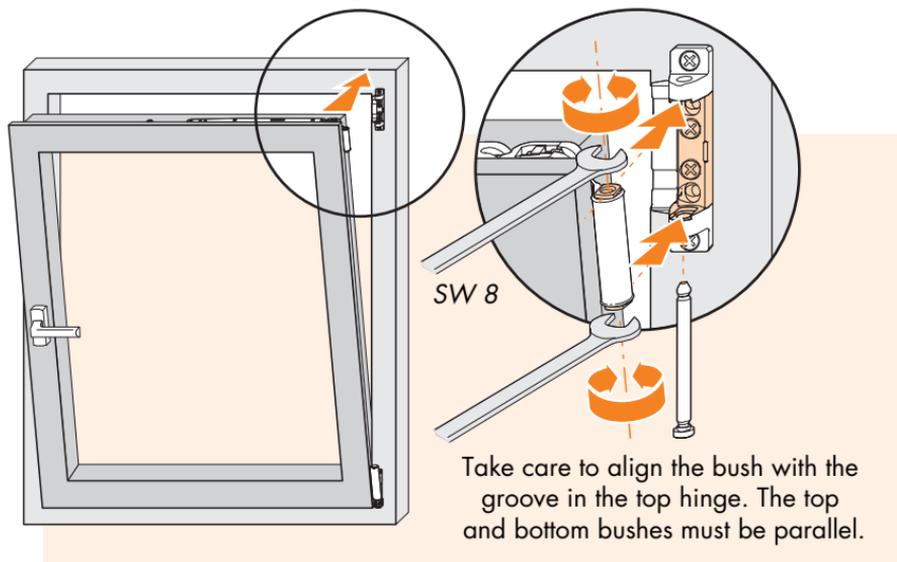


Hanging a Side Hung Window* with concealed centre lock

1. Hanging sash onto bottom hinge

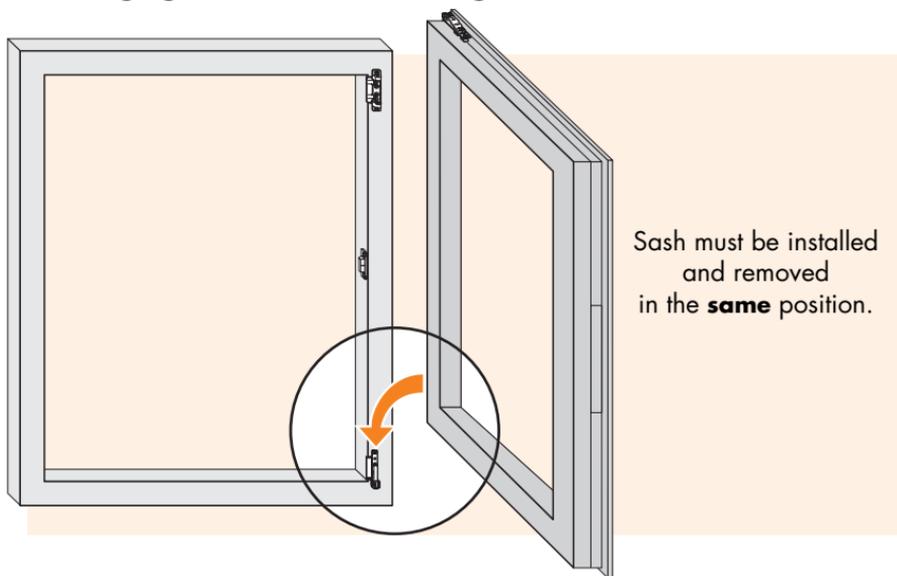

2. Connection to top hinge with built-in friction

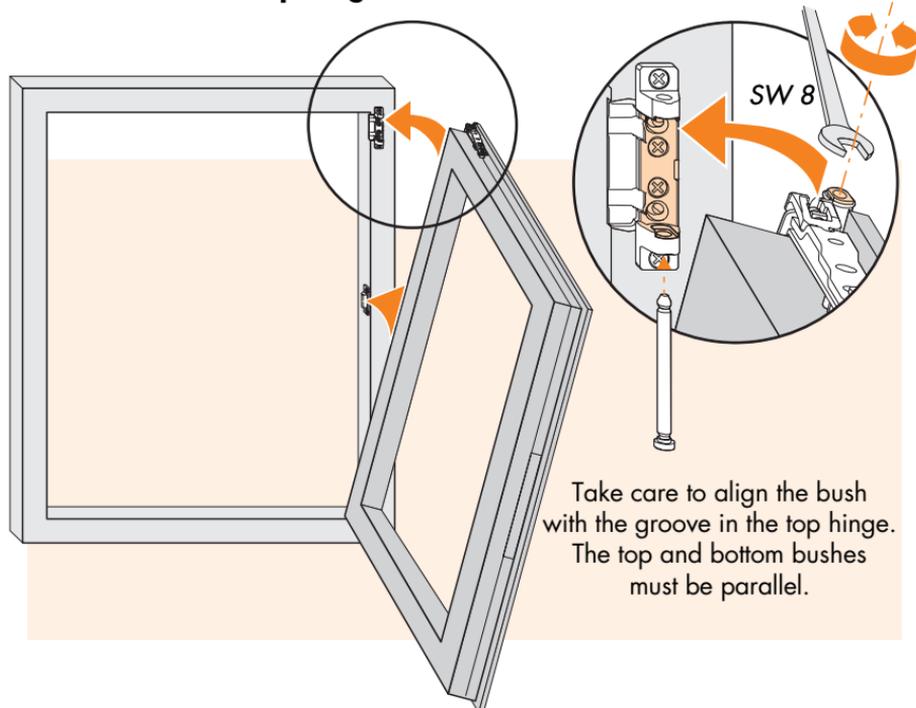

Special Notes:

Your windows are fitted with high quality components from SIEGENIA-AUBI. To ensure their smooth and trouble free operation you must carry out the following maintenance on them at least **once a year**:

1. Lubricate or oil all moving parts and locking points (🔧).
2. Use **only** clean and non-resinous grease or oil.
3. Check all important security components (🔒) for looseness and wear. If necessary tighten fixing screws and replace defective parts.
4. If these parts are not fitted with cover caps on your window, please check whether the top hinge pin is pushed **up** fully in the hinge.
5. **Only** clean your windows with a mild, neutral pH, diluted detergent. Never use aggressive, acid based detergents or scouring powder because they can damage the protective surface of your hardware.

To maintain the surface quality we recommend the following preventative measures:

6. After cleaning the hardware surface treat with a silicon and corrosion free (ie non-acidic) oil, eg: sewing machine oil.

***Warning, N.B. Malfunctions carry a risk of injury!**

Do not continue to operate the window, but make it safe and have it repaired immediately; the following jobs should only be carried out by a specialist window company:

- the replacement of fittings
- the removal and replacement of sashes
- all adjustments of fittings - especially of hinges and stays

No sealants which are hardened by the effect of vinegar or acid, or those containing these substances, must be used on the window or in its immediate vicinity. Direct contact with the sealant or with its vapours could attack the surface of the hardware fittings.

If treating the surface of windows or doors - e.g. by painting or varnishing - all hardware components are to be excluded from this treatment and should also be protected against contamination.


These maintenance instructions are also valid for other fittings and window types that are not mentioned here.

Your Window specialist:





Adjustments

The following adjustments should **only** be performed by an experienced window tradesman:

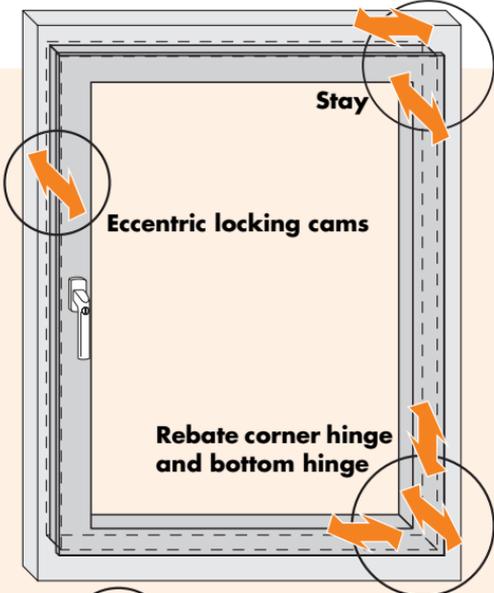

Important:
Height and side adjustments may be limited, depending on the security level.

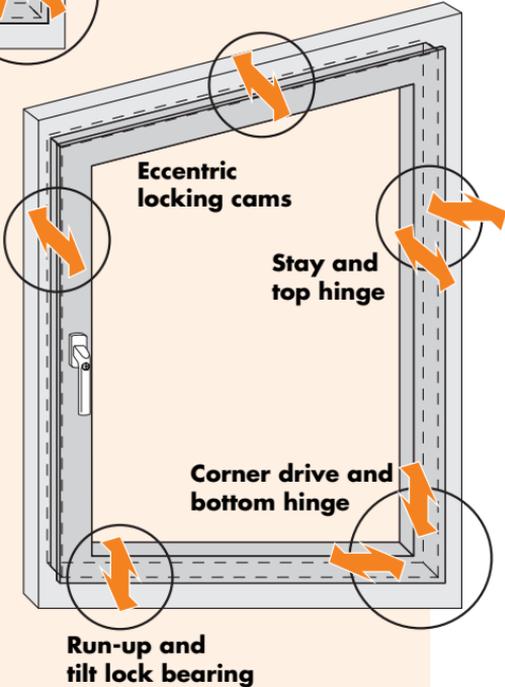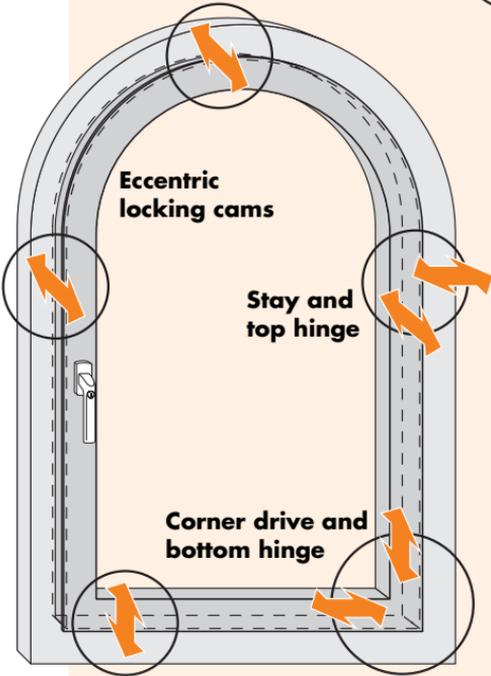





Run-up and tilt lock bearing

Adjustable Parts

Eccentric locking cams

Sash closing pressure adjustment


Adjustment

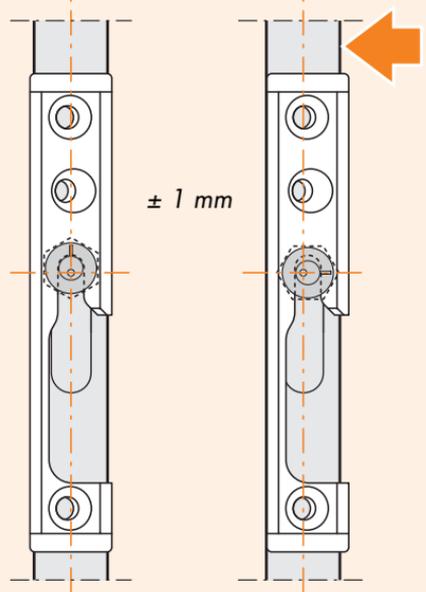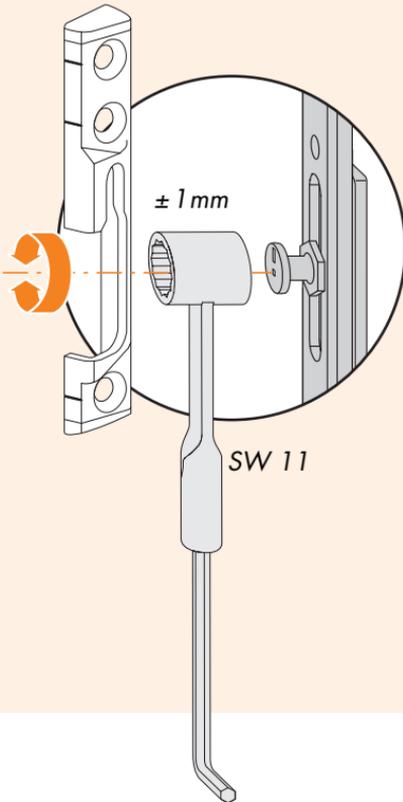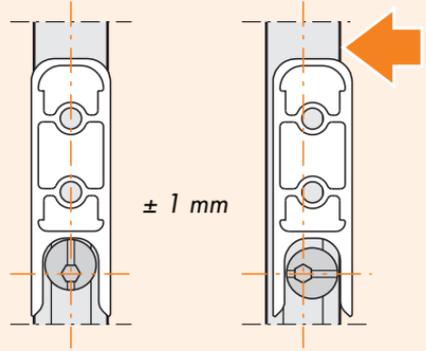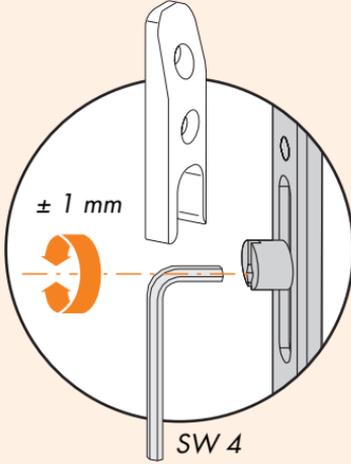

Adjustable Parts


Stay 7

Side to side adjustment

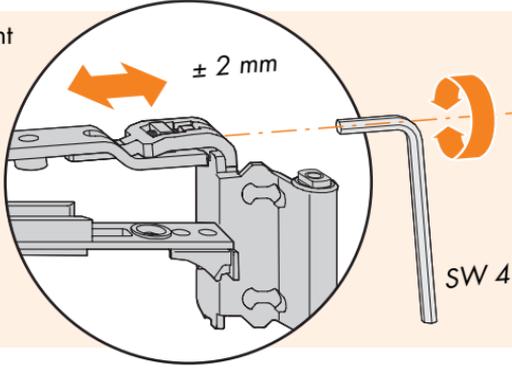


Stay 7

Closing pressure adjustment

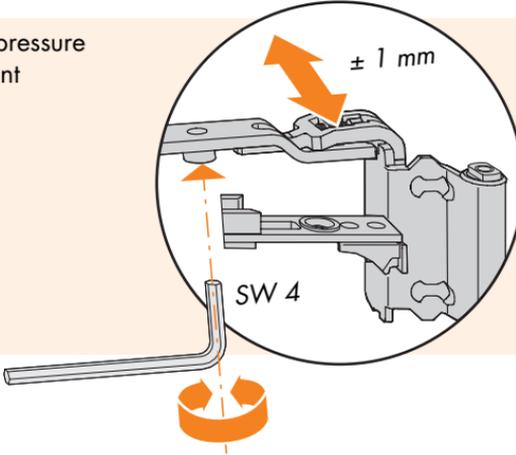

Stay RB


Closing pressure adjustment

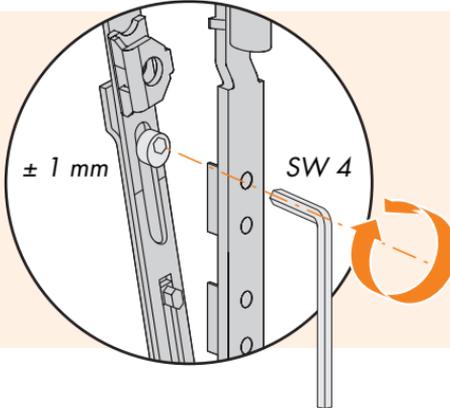

Adjustable Parts


Corner drive BSU S-ES ...

Height adjustment  SW 4

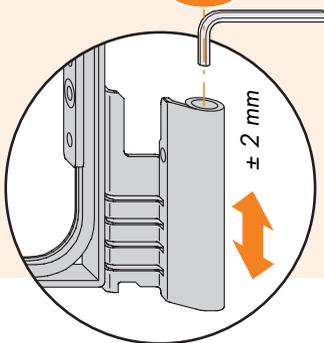


Top hinge RB

Side to side adjustment

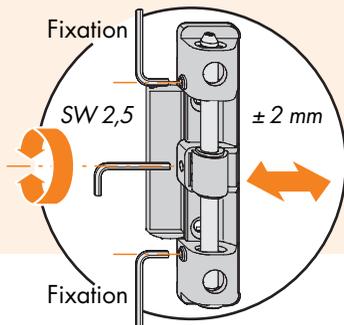


Rebate corner hinge

Closing pressure adjustment

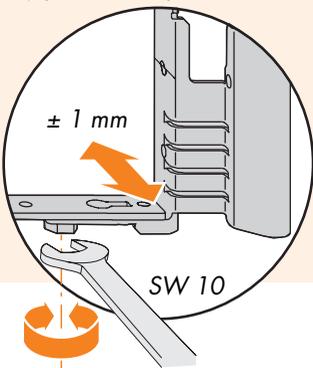


Height adjustment  SW 4

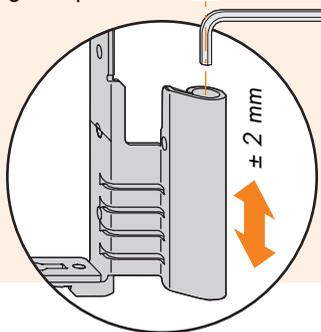

Run-up

Height adjustment Screwdriver max. 4 mm width

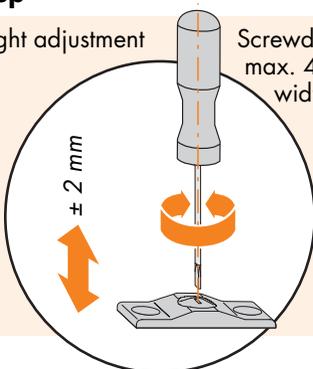

Bottom hinge

Side to side adjustment

